

UNITOR JET SPRAY UNIT 6BAR, 10 LTR STEEL,FPM

The Jet Spray Unit is ideal for applying Unitor cleaning chemicals & degreasers. The main body is made of polyester-coated steel and is portable with a padded carrying strap.



Product information

Supplied complete with tank, spray lance & hose, spray nozzles & pipe, charge pump, pressure gauge and relief valve (set to operate at 6 bar), carrying strap, spare parts pouch.

Features

- Extremely robust coated steel tank even under toughest conditions
- 10 L tank with padded carrying strap
- Large base: stands stable even on uneven surfaces
- Safety lock on the shut-off valve with filter protects against accidental spraying
- 50 cm long brass spray nozzle with flat jet nozzle 80-01 can be rotated 360° angle
- Spray gun and 2.5M long flexible spiral hose for larger range coverage

Benefits

- Ergonomic shut-off valve with filter protects the wrist.
- Safe to operate
- Fast to pressurize
- Easy to apply pre-mixed dilution
- Fine and economical distribution of liquids
- FPM gaskets offer good resistance to many chemicals types

Specification

General

Invent Hazard Material (IMO/EU) classification	NA
Material type and grade	Polyester-coated steel

Dimensions/Weight

Gross Weight [kg]	5. 2kg
--------------------------	--------

Technical data

Operating pressure [bar]	6 bars
Operating temperature [°C]	50
Working volume [l]	10 liters

Directions for use

To assemble

Fasten the carrying strap onto the tank.

Screw the spray line tightly into the outlet port (Note: the location of the spigot in order to be able to insert the lock)

Insert lock (The lock closes and the spray line is secured from unscrewing out of the tank)

Push the hose onto the shut-off valve and secure it with the cap nut

Screw the spray lance onto the shut-off valve

Conduct visual checks to ensure that there's no leaks by pumping up the empty device to 2 bar (The pressure must not decrease more than 0.5 bar (7,35 psi) within 30 minutes) Check the sprayer function: Pull the red button on the safety valve. The pressure must dissipate.

To operate

Pull up the red button on the safety valve [12] until all excess pressure is released from the tank


Press the pump handle [13] down and turn counterclockwise to lock, unscrew the pump, add spraying liquid to the tank, reinsert the pump, or connect a compressed-air hose (max 6 bar), then remove it once pressurized — the sprayer is now ready for use.

Authorised Resellers For India:

Amalgam Biotech

Division of Amalgam Engineering

Address- Veerbhadra Nagar, Baner, Pune, India

 +91-7276020758

 sales@amalgambiotech.com

 www.amalgambiotech.com