



S3 MULTI MAXX



TABLEWARE
CARE



HIGHLY CONCENTRATED
DETERGENT FOR
MANUAL WASHING OF
KITCHEN COOKWARE
AND TABLEWARE

**SUPER CONCENTRATE,
OPTIMAL FORMULA**

**EXTRA POWERFUL
AGAINST GREASE AND
OILS**

**RAPIDLY DISSOLVES
DRY FOOD REMAINS**

**GENTLE TO THE SKIN
OF THE HANDS**

USE INSTRUCTIONS

MANUAL WASHING OF TABLEWARE AND COOKWARE:

1:300–1:200

(3,5–5 ml in 10 L water)

1. Dilute 15–20 ml in 40 L warm water (3,5–5 ml for 10 L water).
2. Place the tableware and cookware into the prepared solution and let them soak for 2–10 minutes. Use sponge or brush to remove the stubborn dirt.
3. Rinse with plenty of clean water and leave the tableware and cookware to air dry.
4. For heavy soiling use double dose.

MANUAL CLEANING OF KITCHEN FLOORS:

1:100

(10 ml to 900 ml water)

1. Prepare the solution (due to high concentrated and viscous formula of MULTI MAXX stir the solution until it is completely dissolved)
2. Apply it on the floor
3. Use a hard brush if need
4. Rinse the surfaces well

TECHNICAL DATA

APPEARANCE:
yellow transparent liquid

pH
7–8

COMPOSITION:
non-ionic and anionic surfactants:
5%–15%, skin softener, perfume,
dye

PACKAGING:
Bottle 1 L, Container 5 L, 10 L

SHELF LIFE:
2 years from date of manufacture

IMPORTANT INFORMATION:



The product is for professional use.

For further information and safety instructions see product label and safety data sheet.

Do not mix with other products!