

# **Handled Ultrasonic Flow Meter**





LF-UF-P

Email: info@leveInflow.com Website: www.leveInflow.com Contact No. : +91-8448557369 Level & Flow Industrial Automation (OPC) Pvt. Ltd.

Bhavya Gold Plaza 207, S/F, Gali no. 6-7, Beadonpura Karol Bagh, New Delhi - 110005

## LF-UF-P Handled Ultrasonic Flow Meter

## **DESCRIPTION**

The transit time flow meter utilizes two transducers that function as both ultrasonic transmitters and receivers. The transducers are clamped on the outside of a closed pipe at a distance from each other. The transducers can be mounted in V method in which case the ultrasound transverses the pipe twice, or W method in which case the ultrasound transverses the pipe four times, or in Z method in which case the transducer are mounted on opposite sides of the pipe and the ultrasound transverses the pipe only once. The selection of mounting method depends on pipe and liquid characteristics. When flow meter works, two transducers transmit and receive the ultrasonic signal which travels firstly downstream and then travels upstream. Because ultra sound travels faster downstream than upstream, there will be a difference of time of flight (delta t). When the flow is still, the time difference (delta t) is zero. Therefore, as long as we know the time of flight both downstream and upstream, we can work out the time difference and the flow velocity (V) and flow volume (Q) the following formula.

#### Where:

V: Liquid velocity

K: Constant

D: distance between the two transducers.

Dt: difference in time of flight

Transmitter and receivers roles are constantly switched by electronics. Ultrasonic pulses travelling in the direction of the flow, travel path between transducer in a shorter period of time than pulses travelling against the flow. This is because the flow speeds up pulses travelling downstream but slows down pulses travelling upstream.

Application: Raw Water, cooling water, DM water, hot water, chemicals, HVAC energy measurement system, Beverages, food, pharmaceutical, power plants, etc.

### Advantages

No moving parts.

Sensor Clamp outside the pipe, no need to cut the lines.

#### Disadvantages

Old or corroded pipes may impede acoustic signal. Too much aeration or turbulence can destroy signal.




### LF-UF-P

## **Handled Ultrasonic Flow Meter**

## TECHNICAL SPECIFICATION

Model	LF-UF-C
Range	25-100/50-700/300-5000mm
Temperature	80deg <sup>o</sup> C/Hightemp.modelalsoavailable
Accuracy	±1% Fullrange
ResponseTime	500 ms
Frequency	1MHz
Sensor Cable	5mx2nos.
Display Unit	Handheld LCD display(Flow rate & totalizer)
Accessories	Sensor gel, Mounting Clamps
Sensors	Ultrasonic Clamp On – 2 nos
Protection	IP65
Flow Unit Display	M <sup>3</sup> , litre
Output	4-20mA
Supply	3 AAA battery
Briefcase	1No Box

### MODEL SELECTION

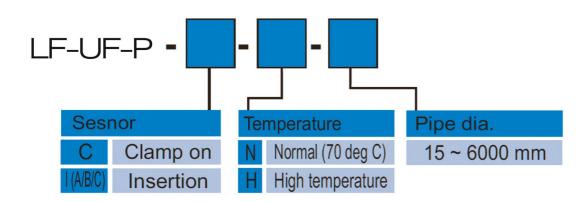




## LF-UF-P Handled Ultrasonic Flow Meter


### TYPES OF INSTALLATION

A single traverse configuration consists of two transducers mounted across from each other on the pipe figure 1, so that the signal they transmit passes through the fluid.

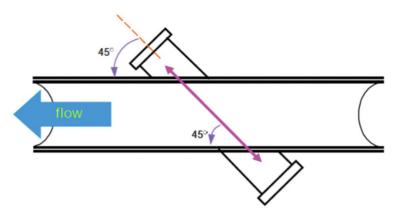


### Z-METHOD

A multiple transverse configuration consists of two transducers mounted on the pipe so that the signal traverses the fluid two or more times before reaching the other transducer figure 2. This allows the signal to remain in the fluid longer, increasing the effective length of the signal path, and thus increasing accuracy. The number of times the signal can traverse through the fluid depends on factors such as transducer frequency, pipe size, pipe wall condition, and the fluid being measured.

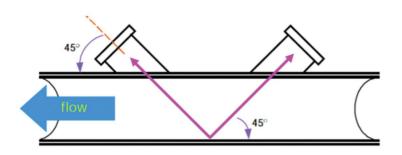

V-METHOD

W-METHOD

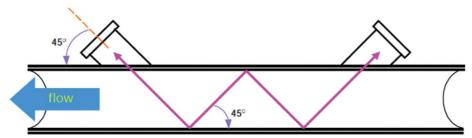



dels may differ in looks & all specification may not be part of every verison) cation may vary as per different model selected. Some feature may not be there in model selected.